



FITTING INSTRUCTIONS

Belly Pan















Kit 34

YAMAHA MT-10 / FZ-10 16-19

Part No. 320-Y120

Qty	Description	Office Use	Item No
1	LH Side Panel	-	1
1	RH Side Panel	-	2
1	Grill	9003-B0174/5	3
1	LH Front Bracket	9003-B0133Z	4
1	LH Rear Bracket	9003-B0171Z	5
1	RH Front Bracket	9003-B0172Z	6
1	RH Rear Bracket	9003-B0173Z	7
4	Grommets	#135	8
4	Spacers	34	9
4	M6 x 20 Nylon Screw	13	10
4	M6 Nylon Flange Nut	12	11
4	M6 x 20 Socket Flange Screw	31	12
4	M6 Flange Nut	17	13
2	Powerbronze logos	#157	14



<div>1</div> <div></div>	<div>2</div> <div></div>	<div>3</div> <div></div>	<div>4</div> <div></div> <div>LH FRONT</div>	<div>REQUIRED:</div> <div>Set of spanners</div> <div>Screwdrivers</div> <div>Sockets</div> <div>Allen Keys</div>
<div>5</div> <div></div> <div>LH REAR</div>	<div>6</div> <div></div> <div>RH FRONT</div>	<div>7</div> <div></div> <div>RH REAR</div>	<div>8</div> <div></div>	
<div>9</div> <div></div>	<div>10</div> <div></div>	<div>11</div> <div></div>	<div>12</div> <div></div>	
<div>13</div> <div></div>	<div>14</div> <div></div>			

Prior to using this product, please refer to our Terms and Conditions on the website.

When fitting your Powerbronze product it will help you to use your motorcycle manual for disassembly and reassembly of your motorcycle. You will need a set of spanners, sockets, Allan keys & screwdrivers.


Taking a few moments to check the parts list and familiarising yourself with the kit will make fitting easier. Remember; whenever a part is fixed by using several nuts, bolts or screws they should be left loose until all are in place and then tightened

www.powerbronze.co.uk


Telephone: 44 (0)1903 783222 Fax: 44 (0)1903 783333 sales@powerbronze.co.uk Powerbronze International Ltd reserve the right to change any specification without notice. These instructions are © Copyright of Powerbronze International Ltd and should not be reproduced in any form without permission

Remove protective film from plastic panels (1 & 2)


1. Fit grommets (8) into belly pan and spacers (9) into grommet Fig.1

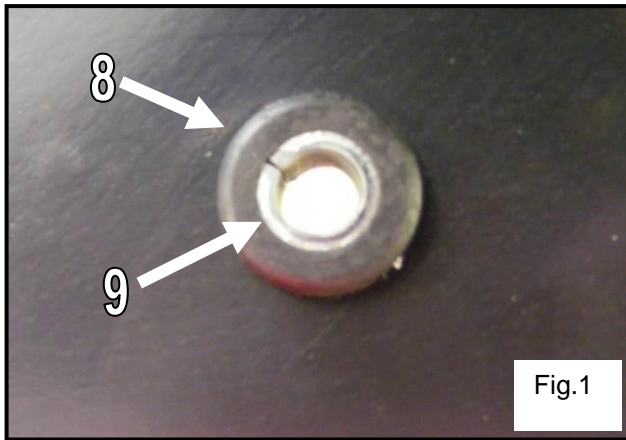

2. Fit grill (3) inside belly pan halves (1 & 2) using nylon screws (10) and nuts (11)

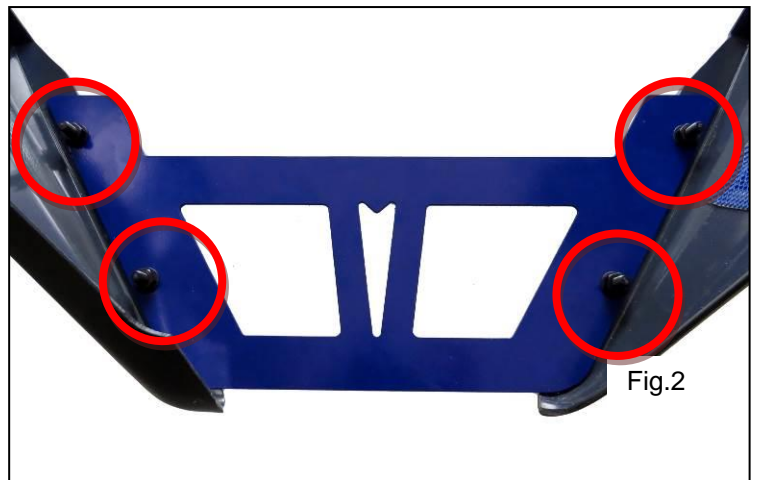


3. Right hand side of bike Fig.3

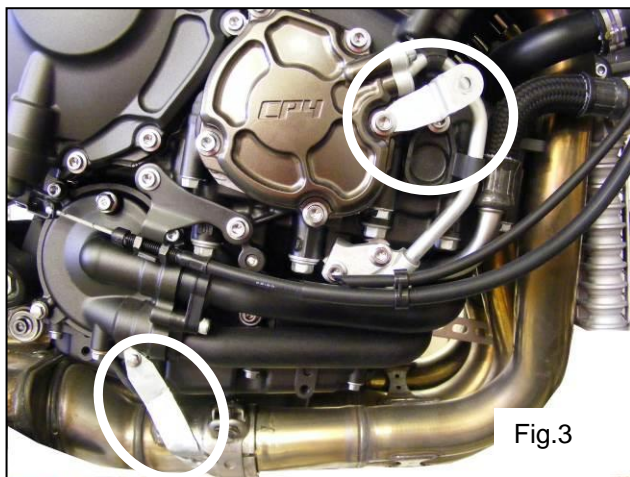

4. Fit front right bracket (6) Fig.4



5. Fit rear right bracket (7) Fig.5


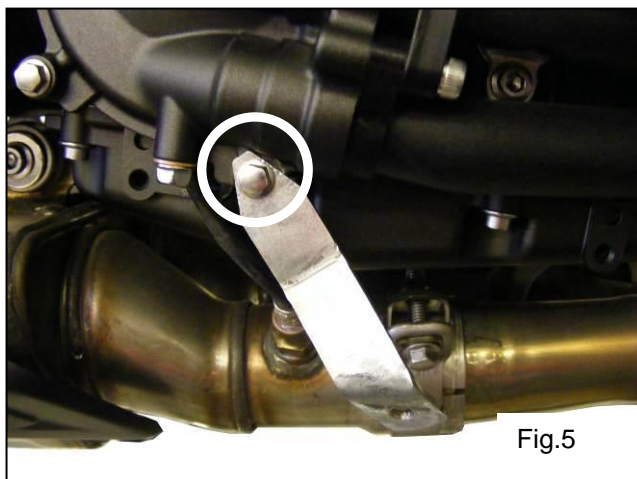


6. Left hand side of the bike Fig.6



5. Fit front left bracket (4) Fig.7

6. Fit rear left bracket (5) Fig.8

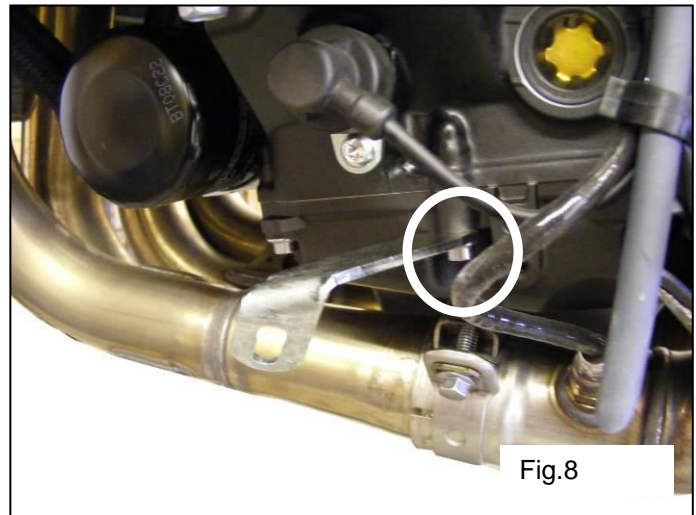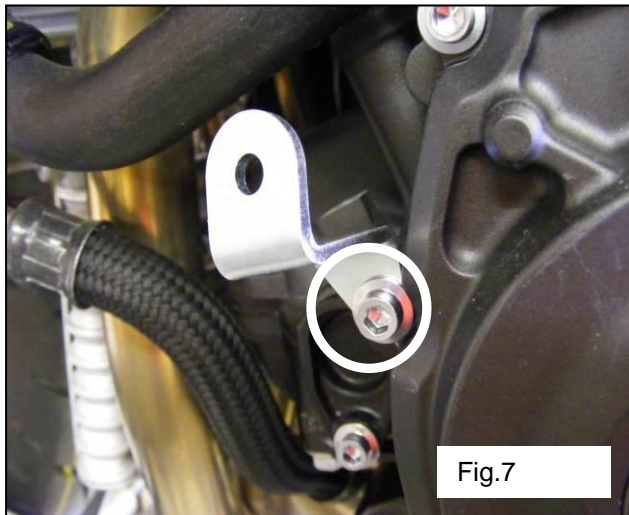

7. Align belly pan to brackets and fit using M6 x 20 socket flange screw (12) and M6 nuts (13) to secure the belly pan to the brackets.

IMPORTANT: Always check alignment of fairing and mounting bolt tension periodically.