

POWERBRONZE

FITTING INSTRUCTIONS

Hand Guards

Kit 72

MOTO GUZZI V7 STONE 17+ / V7 STONE NIGHT 17+

Part No. 380-M101

Qty	Description	Office Use	Item No
2	Hand Guards		1
1	L/H Bracket	9003-HG020B	2
1	R/H Bracket	9003-HG030B	3
2	M6x20 socket screw	31	4
2	M6 flange nut	17	5
2	Grommet	#135	6
2	Spacer	34	7
2	M6 x 40 Socket Cap Screw	#135A	8
2	Powerbronze Bar Ends	251	9
2	Bar End Insert	231	10
2	M8 HANDGUARD RUBBER WASHER	224	11
2	M6 Washer	20	12
2	Powerbronze label – small	#158	13




Prior to using this product, please refer to our Terms and Conditions on the website.

When fitting your Powerbronze product it will help you to use your motorcycle manual for disassembly and reassembly of your motorcycle. You will need a set of spanners, sockets, torques keys, Allen keys & screwdrivers.


Taking a few moments to check the parts list and familiarising yourself with the kit will make fitting easier. Remember; whenever a part is fixed by using several nuts, bolts or screws they should be left loose until all are in place and then tightened

Remove original bar ends**Remove protective film from hand guards**

1. Fit bar end assembly to both hand guards.
Do not tighten up the screw at this stage. Fig.1

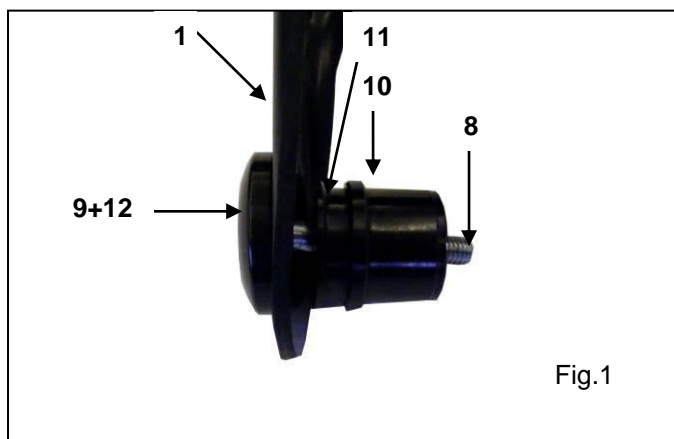

2. Fit grommets (6) into the hand guards and spacers (7) into grommets. Fig.2

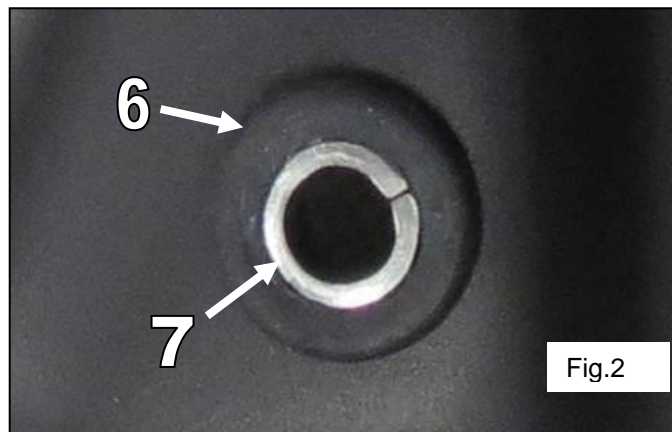


3. Fit brackets (2 & 3) to mirror supports by removing mirror, positioning brackets on top of original spacer and replacing mirror. Fig.3 & 4



4. Fit hand guards using bar end inserts and tighten M6 x 40 cap socket screw. Fit the hand guards to the brackets using M6 x 20 (4) M6 Flange nut (5). Fig 5

5. Check lever operation insuring no resistance and that they clear the hand guards. Fig. 6

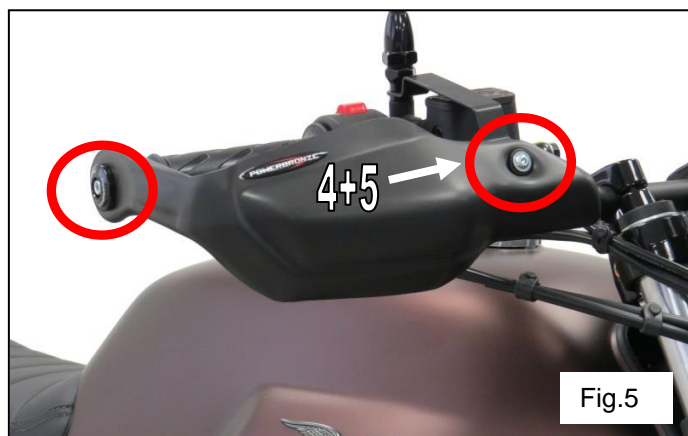

NOTE: The best position for the hand guards can be achieved by rotating the bar end and rotating the LH and RH Brackets.

IMPORTANT: Always check alignment of hand guards and mounting bolt tension periodically.