

FITTING INSTRUCTIONS

Touring / Adventure Sport Screens

CF MOTO 800MT SPORT 22+/800MT TOURING 22+/800MT EXPLORE 23+

Part No. 420-CF101 / 420-CF102 / 460-CF101

KIT 163

Qty	Description	Office Use	Item No
4	Grommet spacer	34	1
4	M6x20 Socket Flange Screw—Black	193	2
4	Rubber Grommets	#135	3



Prior to using this product, please refer to our Terms and Conditions on the website.

When fitting your Powerbronze product it will help you to use your motorcycle manual for disassembly and reassembly of your motorcycle. You will need a set of spanners, sockets, torques keys, Allen keys & screwdrivers.

Taking a few moments to check the parts list and familiarizing yourself with the kit will make fitting easier. Remember; whenever a part is fixed by using several nuts, bolts or screws they should be left loose until all are in place and then tightened

1. Remove original screen from bike.
2. Fit rubber grommets (3) and grommet spacers (1) into screen as shown in Fig.1.
3. Fit Powerbronze screen to bike using M6x20 Socket Flange Screws (2).

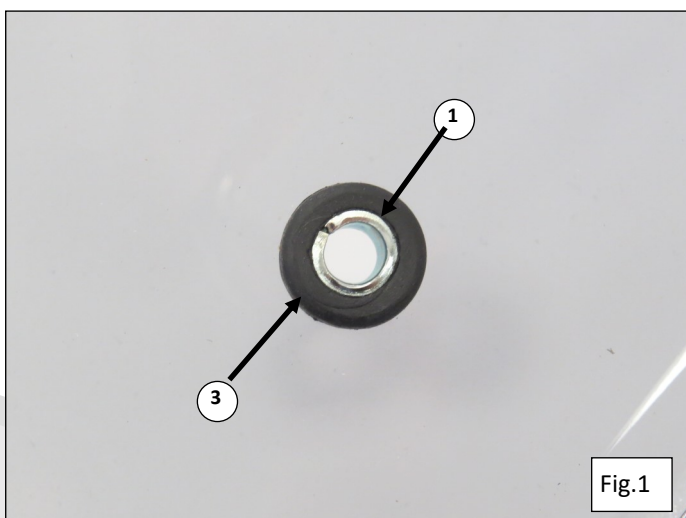


Fig.1

www.powerbronze.co.uk

Powerbronze International Ltd reserve the right to change any specification without notice. These instructions are Copyright of Powerbronze International Ltd and should not be reproduced in any form without permission

ASSEMBLED:

