



## Honda CB600 Hornet 98-06 / CB900 Hornet 02+ Light Screens

430-U117 / 430-U117A / 430-U117B

### Fitting Instructions

| Qty: | Description:                              |            |
|------|-------------------------------------------|------------|
| 1    | Screen                                    |            |
| 2    | M8 x 35 Button Head Bolts                 | 160        |
| 4    | M8 STEEL FORM C FLAT WASHER - 210D - ZINC | 43         |
| 2    | SPACER M8 X 10                            | 59         |
| 1    | LIGHT SCREEN F4 2018 RANGE-LEFT HAND      | 9003-F095B |
| 1    | LIGHT SCREEN F4 2018 RANGE-RIGHT HAND     | 9003-F096B |
| 6    | M5 x 16 Plastic Screws                    | 2          |
| 6    | M5 Plastic Nuts                           | 1          |
| 4    | NEOPRENE FLAT WASHER BLACK                | 94         |
| 1    | Powerbronze Sticker                       | #158       |

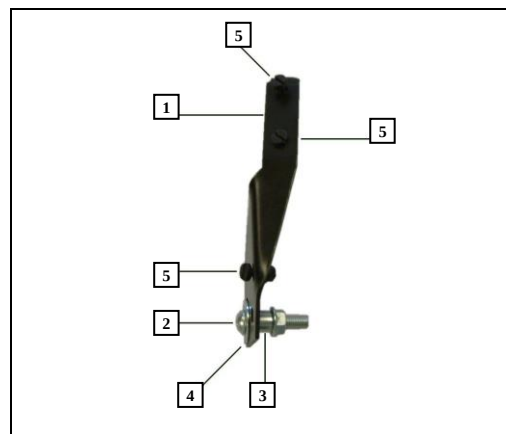


Fig 1

1: Remove head lamp lens.

2: Remove 2 bolts holding head lamp bracket shell.

3: Fit Left and Right **F4** Brackets (1) using **M8 x 35** Button Head Bolt (2), Spacer (3) and 2 x **M8** Large Washers (4) as show in Fig 2.



4: Set angle of brackets for screen. Fit **M5** plastic screws and nuts (5) in small hole to use as locating pins to stop bracket moving backwards.

5: Re-fit the head lamp lens.

6: Offer the screen up to the brackets using the **M5** screws supplied. Fit rubber washers between screen and bracket fasten with **M5** nut. (Do not over tighten screws.)



[www.powerbronze.co.uk](http://www.powerbronze.co.uk)

Telephone: 44 (0)1903 783222 Fax: 44 (0)1903 783333 [sales@powerbronze.co.uk](mailto:sales@powerbronze.co.uk) Powerbronze

International Ltd reserve the right to change any specification without notice. These instructions are © Copyright of Powerbronze International Ltd and should not be reproduced in any form without permission.