

# B15

## BMW S1000R 2017-

### Kit for Left Side

ID	Description	Cat.No	Pcs
1	Steel Adapter	758	1
2	Dural. sleeve d=8mm	1334	2
3	Screw M10x60mm	1048	2
4	AL insertion M10	X1	1
5	Screw M10x70mm	851	1
6	Dural. sleeve d=5mm	1335	1
7	Screw M5x25mm	1036	1
8	Washer M5 - large	1057	1
9	Dural. sleeve d=30mm	3	1


### Kit for Right Side

ID	Description	Cat.No	Pcs
1	Steel Adapter	759	1
2	Dural. sleeve d=8mm	1334	2
3	Screw M10x60mm	1048	2
4	AL insertion M10	X1	1
5	Screw M10x40mm	854	1
6	Dural. sleeve d=5mm	1335	1
7	Screw M5x25mm	1036	1
8	Washer M5- large	1057	1



### **Right Side:**

1. Dismount rear motorcycle hood.
2. Dismount the original screws.
3. Prepare ID.1 steel adapter and ID.3 screws, insert the screws into adapter and from other side, put on the ID.2 dural. sleeves.
4. Mount this assembly onto the motorcycle frame.
5. Now you can mount back the rear hood. To increase the distance between hood and frame, use ID.6 dural. sleeve in the rear part, which achieves support for the hood. With ID.7 screw and ID.8 washer you can now tighten the fit.
6. Take the protector and insert ID.4 Aluminium insertion
7. Insert ID.5 screw into the protector with insertion.
8. Mount this aseembly into the adapter on your bike.
9. Tighten using recommended Tightening torque provided by motorcycle manufacturer. This information is to be found in moto manual.

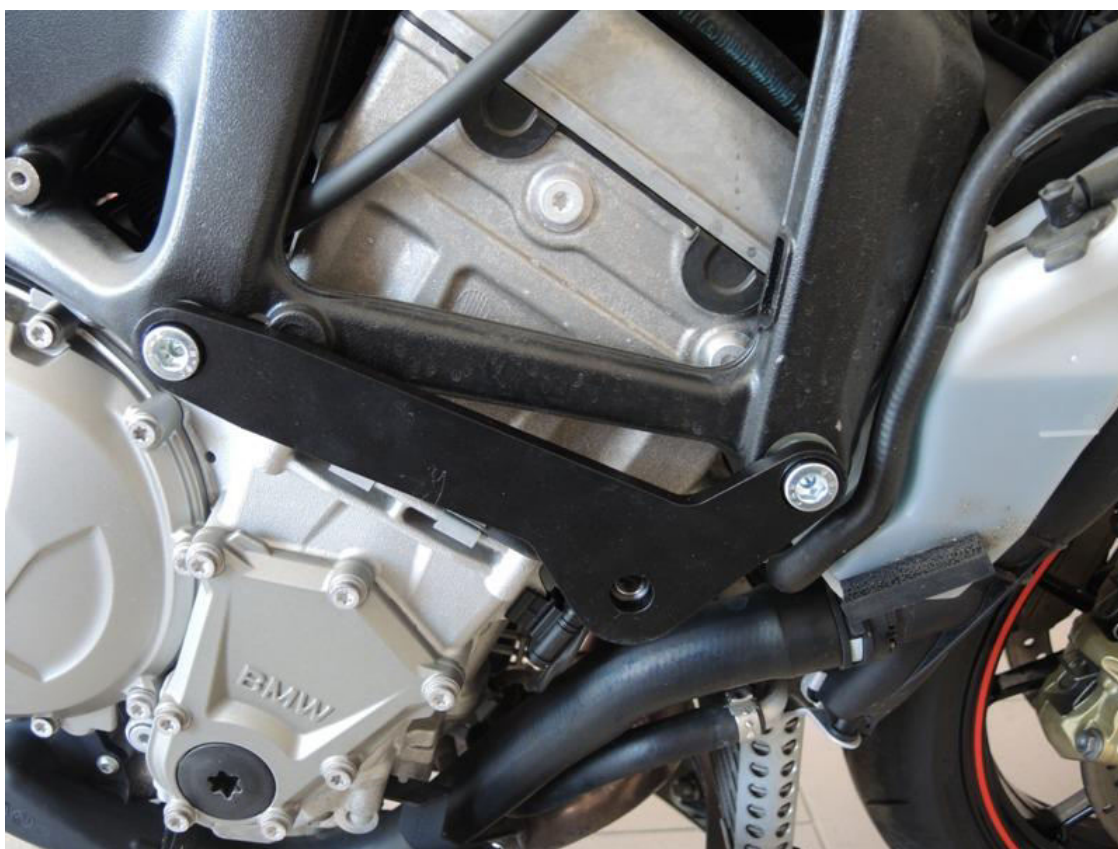

### **Left Side :**

1. Dismount rear motorcycle hood.
2. Dismount the original screws.
3. Prepare ID.1 steel adapter and ID.3 screws, insert the screws into adapter and from other side, put on the ID.2 dural. sleeves.
4. Mount this assembly onto the motorcycle frame.
5. Now you can mount back the rear hood. To increase the distance between hood and frame, use ID.6 dural. sleeve in the rear part, which achieves support for the hood. With ID.7 screw and ID.8 washer you can now tighten the fit.
6. Take the protector and insert ID.4 Aluminium insertion.
7. Insert ID.5 screw into the protector and from other side put on the ID.9 sleeve.
8. Mount this assembly into the adapter on your bike.
9. Tighten using recommended Tightening torque provided by motorcycle manufacturer. This information is to be found in moto manual.

**Note- We recommend using medium strenght thread glue during assembly for threads of all screws (blue color).**

