

B19

BMW F900XR 2019-

Kit for left side

ID.	Description	Cat.No.	PC
1	AL insert to the protector	X1	1
2	Bolt M10x90mm	880	1
3	Dural.roller l=50mm	5	1
4	Dural.adapter	764	1
5	Dural.roller l=55mm	1360	2
6	Bolt M12x100mm	986	2
7	Plastic cover M12	X60	1

Kit for right side


ID.	Description	Cat.No.	PC
1	AL insert to the protector	X1	1
2	Bolt M10x70mm	851	1
3	Dural.roller l=30mm	3	1
4	Dural.adapter	765	1
5	Dural.roller l=5,5mm	1364	1
6	Dural.roller l=17mm	1363	1
7	Bolt M12x120mm	968	1
8	Bolt M12x110mm	946	1
9	Plastic cover M12	X60	1



Mounting the left side:

1. Remove the original side plastics on the left and right.
2. Mount the left and right protectors in the bracket according to the photos below.
3. Remove the original screws on the left side.
4. Take the duralumin adapter ID.4. and insert the screws ID.6.
5. Slide the ID.5 duralumin rollers onto the bolts from the back of the adapter and mount the entire assembly on the motorcycle, pull 40Nm and place the ID.7 plastic cap on the rear bolt head.
6. Reinstall the left side plastics.
7. Take the crash protector, insert the aluminum insert ID.1 with the screw ID.2 and insert the duralumin roller ID.3 from the back of the protector.
8. Mount this entire assembly on the duralumin adapter and pull it off.

Note: We recommend using medium strenght thread glue for all bolts (blue color).

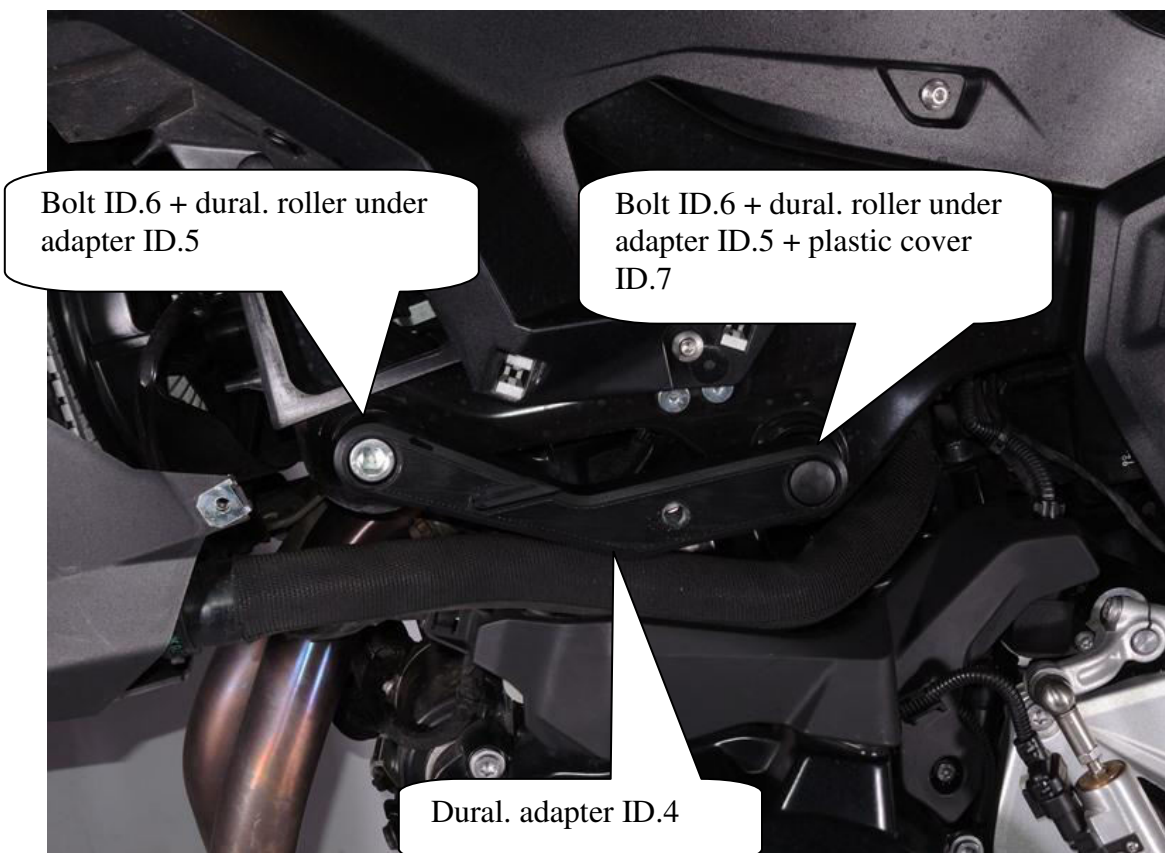

Mounting the right side:

1. Mounting the right side is very similar to the left side
2. Remove the original screws on the right side.
3. Take the duralumin adapter ID.4. and insert the screws ID.7 and ID.8 into it, the screw ID.7 belongs to the front part of the adapter and ID.8 to the back part of the adapter
4. Slide the ID.5 and ID.6 duralumin rollers onto the screws on the back of the adapter. The ID.5 duralumin roller belongs to the front screw and the ID.6 duralumin roller belongs to the rear screw.
5. Mount the entire assembly on the motorcycle, pull 40Nm and place the plastic cover ID.9 on the head of the rear screw.
6. Reinstall the right side plastics.
7. Take the crash protector, insert the aluminum insert ID.1 with the screw ID.2 and insert the duralumin roller ID.3 from the back of the protector.
8. Mount this entire assembly on the duralumin adapter and pull it off.

Note: We recommend using medium strength thread glue for all bolts (blue color).

