

B7


BMW S 1000R 2014-



Fitting kit left side:

ID	Description	Cat.N	Qt
1	Steel Adapter	692	1
2	Dural. spacer d=6,5	1105	1
3	Bolt M10x60	850	1
4	Washer M10	804	1
5	Polyamid spacer 20mm	X6	1
6	Bolt M8x25	831	1
7	Poly.spacer d=6mm	X64	1
8	Bolt M6x16	962	1
9	Washer M6	947	1
10	Steel box	X1	1
11	Bolt M10x70	851	1
12	Dural. spacerd=30	3	1
13	3M Tape	3M	2

Fitting kit right side:

ID	Description	Cat.N	Qt
1	Steel adapter	693	1
2	Dural.spacer d=7	1107	1
3	Bolt M10x60	850	1
4	Washer M10	804	1
5	Polyamid.spacer 20mm	X6	1
6	Bolt M8x25	831	1
7	Poly.spacer d=6mm	X64	1
8	Bolt M6x16	962	1
9	Washer M6	947	1
10	Steell box	X1	1
11	Bolt M10x45	848	1
12	3M Tape	3M	2

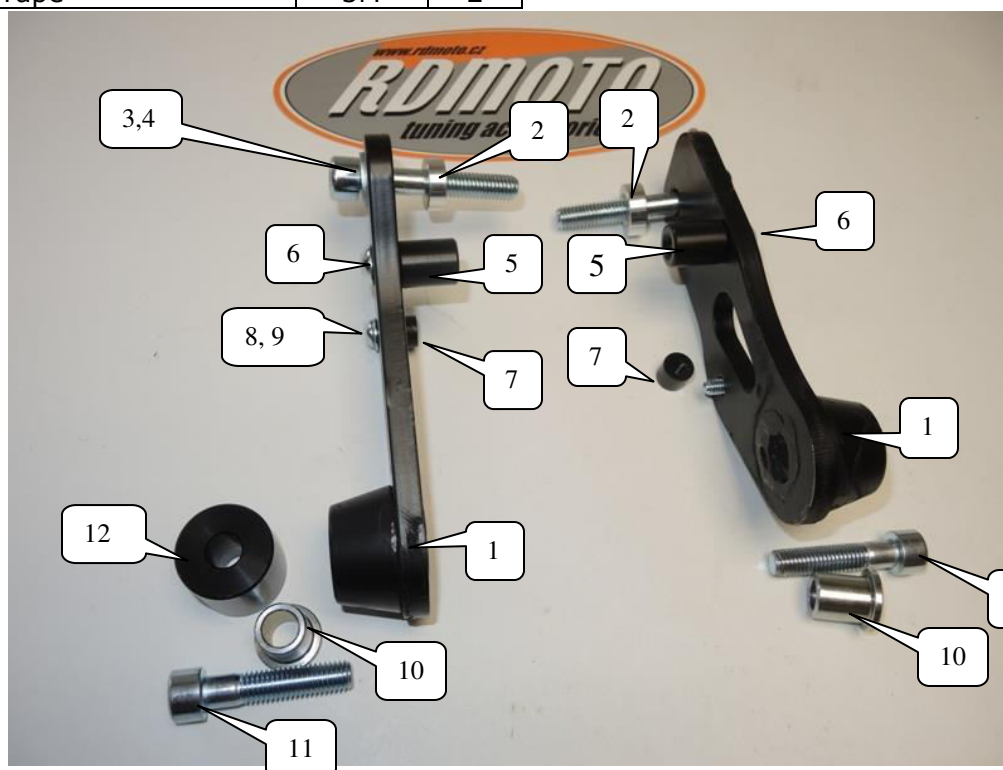

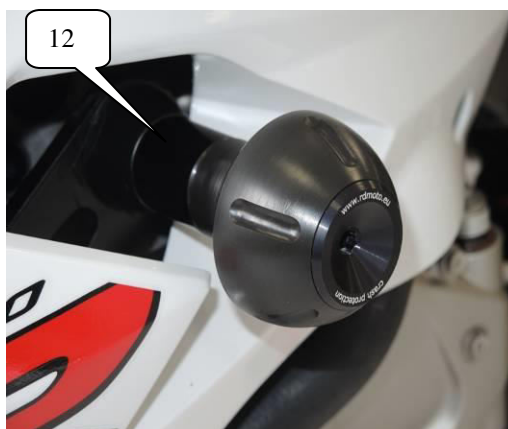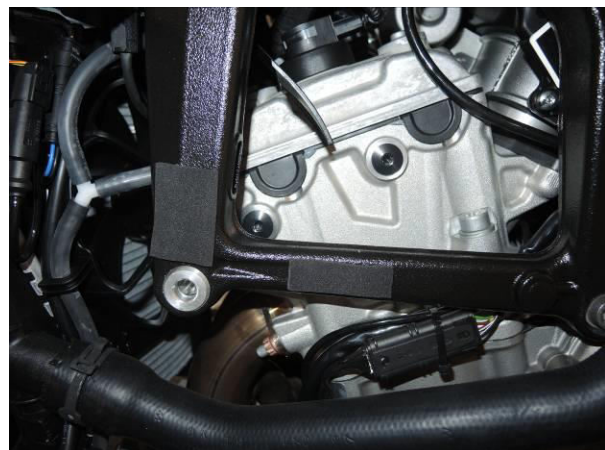

Assembly instruction left side:

1. Take left hand side fairing out from bike.
2. Do assembly from back side poly spacer ID.7 On the adapter ID.1, use bolt ID.8. Under the bolt place washer ID.9.
3. Do assembly from back side poly spacer ID.5 On the adapter ID.1, use bolt ID.6.
4. Dismantle original bolt M10 from frame (as show on the picture).
5. Stick 3M tape on the frame (as on the picture).
6. Insert dural. spacer ID.2 into the frame.
7. Place steel adapter ID1 with poly spacers on the bike. Use bolt ID.3 with washer ID.4 to assembly.
8. Put fairing back to the bike.
9. Insert steel box ID.10 into the protector. This kit mounting on the steel adapter by bolt ID.11. Place spacer ID.12 under the protector and tighten it.



RDMOTO CZECH REPUBLIC
info@rdmoto.eu
www.rdmoto.eu

Assembly instruction right side:

1. Take left hand side fairing out from bike.
2. Do assembly from back side poly spacer ID.7 On the adapter ID.1, use bolt ID.8. Under the bolt place washer ID.9.
3. Do assembly from back side poly spacer ID.5 On the adapter ID.1, use bolt ID.6.
4. Dismantle original bolt M10 from frame (as show on the picture).
5. Stick 3M tape on the frame (as on the picture).
6. Insert dural. spacer ID.2 into the frame.
7. Place steel adapter ID1 with poly spacers on the bike. Use bolt ID.3 with washer ID.4 to assembly.
8. Put fairing back to the bike.
9. Insert steel box ID.10 into the protector. This kit mounting on the steel adapter by bolt ID.11.

We recommend to use glue of all threads, medium strong. (Blue colour Loctite 243)