

CF107KD-PH01

Yamaha MT07/XSR 700

Kit for left side			
ID	Description	Cat.No.	Pcs
1	Al insert to the protector	X122	1
2	Bolt M12x135x1,25mm	991	1
3	Crash protector	PVPKN-0/16	1
4	Washer M10-flat	804	1
5	Dural. roller l=50mm	1206	1
6	Bolt M10x40x1,25mm	941	1
7	Dural. roller l=6mm	1405	1


Kit for right side			
ID	Description	Cat.No.	Pcs
1	Al insert to the protector	X122	1
2	Bolt M12x130x1,25mm	1027	1
3	Crash protector	PVPKN-0/16	1
4	Washer M10-flat	804	1
5	Dural. roller l=45mm	1303-K	1
6	Bolt M10x40x1,25mm	941	1

We recommend using a medium strength thread adhesive.

Instructions:

- 1.) Remove the original M12 bolt on the left side and the lower M10 bolt holding the side stand.
- 2.) Take the crash protector ID.3, insert the aluminum insert ID.1 with the M12x135x1.25mm bolt ID.2 into the protector.
- 3.) Insert this entire assembly into the crash frame and insert the dural roller l=50mm ID.5 from the back.
- 4.) Mount it on the motorcycle frame, but do not tighten it.
- 5.) Now take the M10x40x1.25mm ID.6 bolt with the M10 ID.4 washer.
- 6.) Insert the dural roller l=6mm ID.7 between the crash frame and the motorcycle frame in the side stand area and tighten it with the M10x40x1.25mm ID.6 bolt with the M10 ID.4 washer.
- 7.) Tighten both bolts.
- 8.) The assembly of the right side is identical except for the length of the bolt and the duralumin roller in the upper part (assemble with a bolt M12x130x1.25mm ID.2 with a duralumin roller l=45mm ID.5) and in the lower part of the assembly, do not put a duralumin roller between the motorcycle frame and the crash frame.

Left side

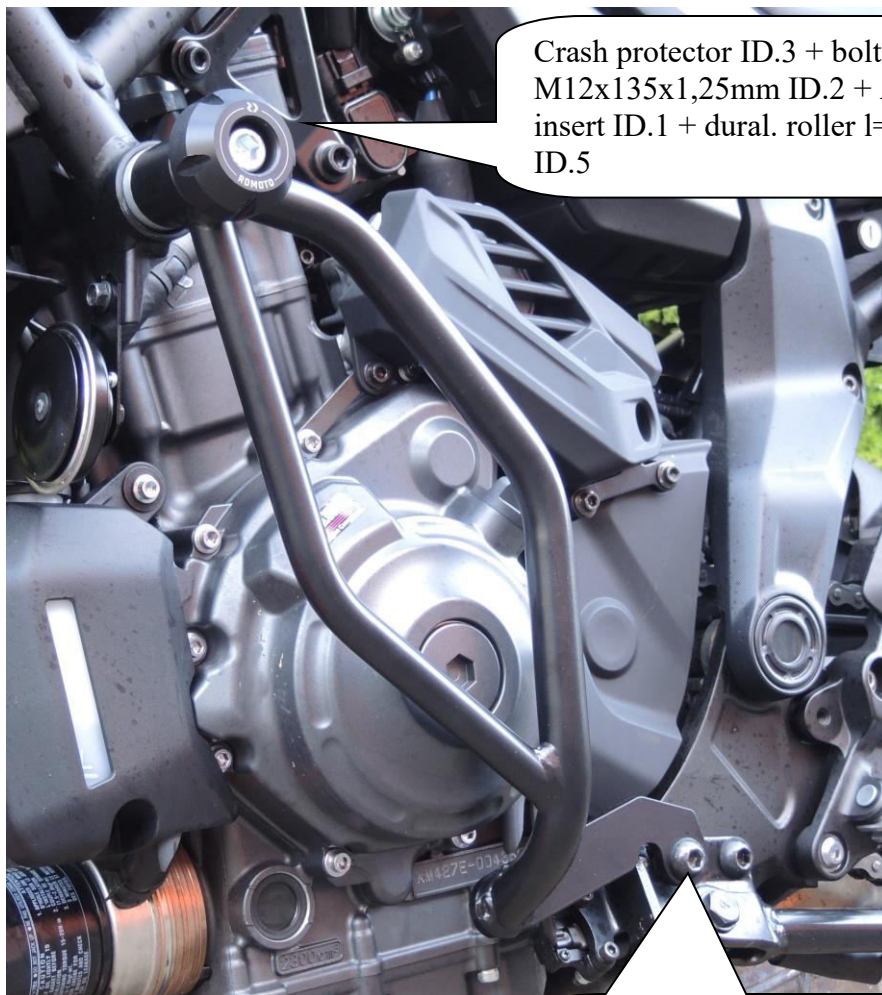

Crash protector ID.3 + bolt
M12x135x1,25mm ID.2 + Al
insert ID.1 + dural. roller l=50mm
ID.5

Bolt M10x40x1,25mm ID.6 +
washer M10 ID.4 + dural.roller
l=6mm ID.7