

CF121

BMW R1200GS 2013-

Kit for Left Side			
ID	Description	Cat. No.	Pcs.
1	Frame	CF121	1
2	Bolt M10x50	849	1
3	Washer-flat M10	804	1
4	Plastic cover M10	X4	1
5	Dural. roller d=15mm	465	1
6	Bolt M8x35	861	1
7	Washer M8 flat	802	3
8	Bolt M8x30	834	1
9	Dural. roller d=4mm	1305	1
10	Safety nut M8	809	1
11	Plastic cover M8	X5	2
12	Dural.roller d=50mm	209	1
13	Washer M12	803	1
14	Nut M12	811	1
15	Rod M12x340x30x30		1


Kit for Right Side			
ID	Description	Cat. No.	Pcs.
1	Frame	CF121	1
2	Bolt M10x50	849	1
3	Washer M10 flat	804	1
4	Plastic cover M10	X4	1
5	Dural. roller d=15mm	465	2
6	Bolt M8x35	861	2
7	Washer M8 flat	802	3
8	Bolt M8x30	834	1
9	Safety nut M8	809	1
10	Plastic cover M8	X5	2
11	Dural. roller d=50mm	209	1
12	Washer M12	803	1
13	Nut M12	811	1
14	RDmoto sticker		2
15			

We recommend using medium strenght thread glue.

Instructions:

- 1.) Unscrew the original front M10 bolt on the left side where stand is attached to the frame and M12 bolt in the middle of the bike (see pictures), which you will replace with M12 ID.15 Rod.
- 2.) Equip the M12 ID.15 rod with ID.12 dural. roller and then mount the crash frame, M12 ID.13 washer and M12 ID.14 nut onto it as well. (Don't tighten anything yet).
- 3.) Now attach the bottom part (where the stand is) with M10 ID.2 bolt and ID.3 washer.
- 4.) In the front part, use M8 ID.6 bolt, M8 ID.7 washer and insert the ID.5 roller between the frame and the engine.
- 5.) Front upper part is attached with M8 ID.8 bolt and M8 ID.7 washer. The frame is slipped on from rear to front. Dont forget to put ID.9 roller in between, as well as washer and M8 ID.10 nut (see photos).
- 6.) Use the same steps on the other (right) side.
- 7.) Finally, tighten all bolts and put up the plastic covers.

Rod M12 ID.15 + dural.
roller ID.11 + Washer
M12 ID.12 + Nut M12
ID.13

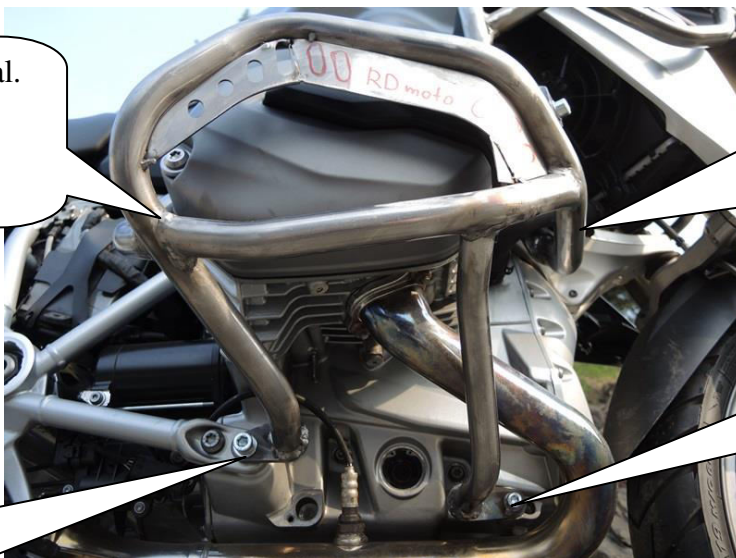


Rod M8 ID.8 + dural
roller ID.5 + 2x
Washer M8 ID.7
+ Cover M8 ID.10 +
Nut M8 ID.9

Bolt M8 ID.6 +
roller ID.5 + Washer
M8 ID.7 + Cover
M8 ID.10

Bolt M10 ID.2 +
Washer M10 ID.3 +
Plastic cover M10
ID.4



Bolt M8 ID.8 + dural.
roller ID.9 + 2x
Washer M8 ID.7 +
M8 ID.11 + Nut M8
ID.10.

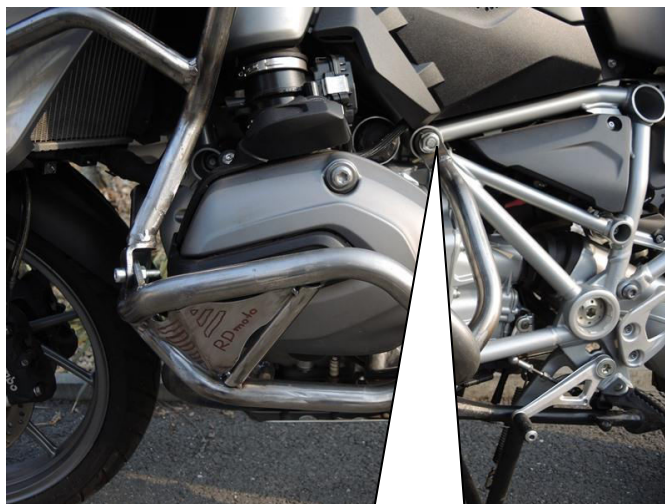

Dural. roller ID.12 +
Washer M12 ID.803 +
Nut M12 ID.14



Bolt M8 ID.6 + Roller ID.5 +
Washer M8 ID.7 + Cover M8
ID.11

Bolt M10 ID.2 + Washer
M10 ID.3 + Plastic cover
M10 ID.4