



RDMOTO CZECH REPUBLIC
info@rdmoto.eu
www.rdmoto.eu

CF146


BMW F900XR

Kit for the left side			
ID	Description	Cat.No.	Pcs
1	Dural. roller (l=27,5mm)	1366	1
2	Dural. roller (l=62mm)	1361	1
3	Bolt M12x100mm	986	1
4	Bolt M10x65mm	1012	1
5	Al insert	X116	1
6	Plastic cover	X60	1
7	Washer M10	804	1
8	Bolt M8x30mm	834	1
9	Sticker RDMoto		1

Kit for the right side			
ID	Description	Cat.No.	Pcs
1	Dural. roller (l=23mm)	1365	1
2	Dural. roller (l=11mm)	1362	1
3	Bolt M12x110mm	946	1
4	Bolt M10x65mm	1012	1
5	Al insert	X116	1
6	Plastic cover	X60	1
7	Washer M10	804	1
8	Steel adapter	X159	1
9	Sticker RDMoto		1

We recommend using medium-strength thread glue.

Left side :

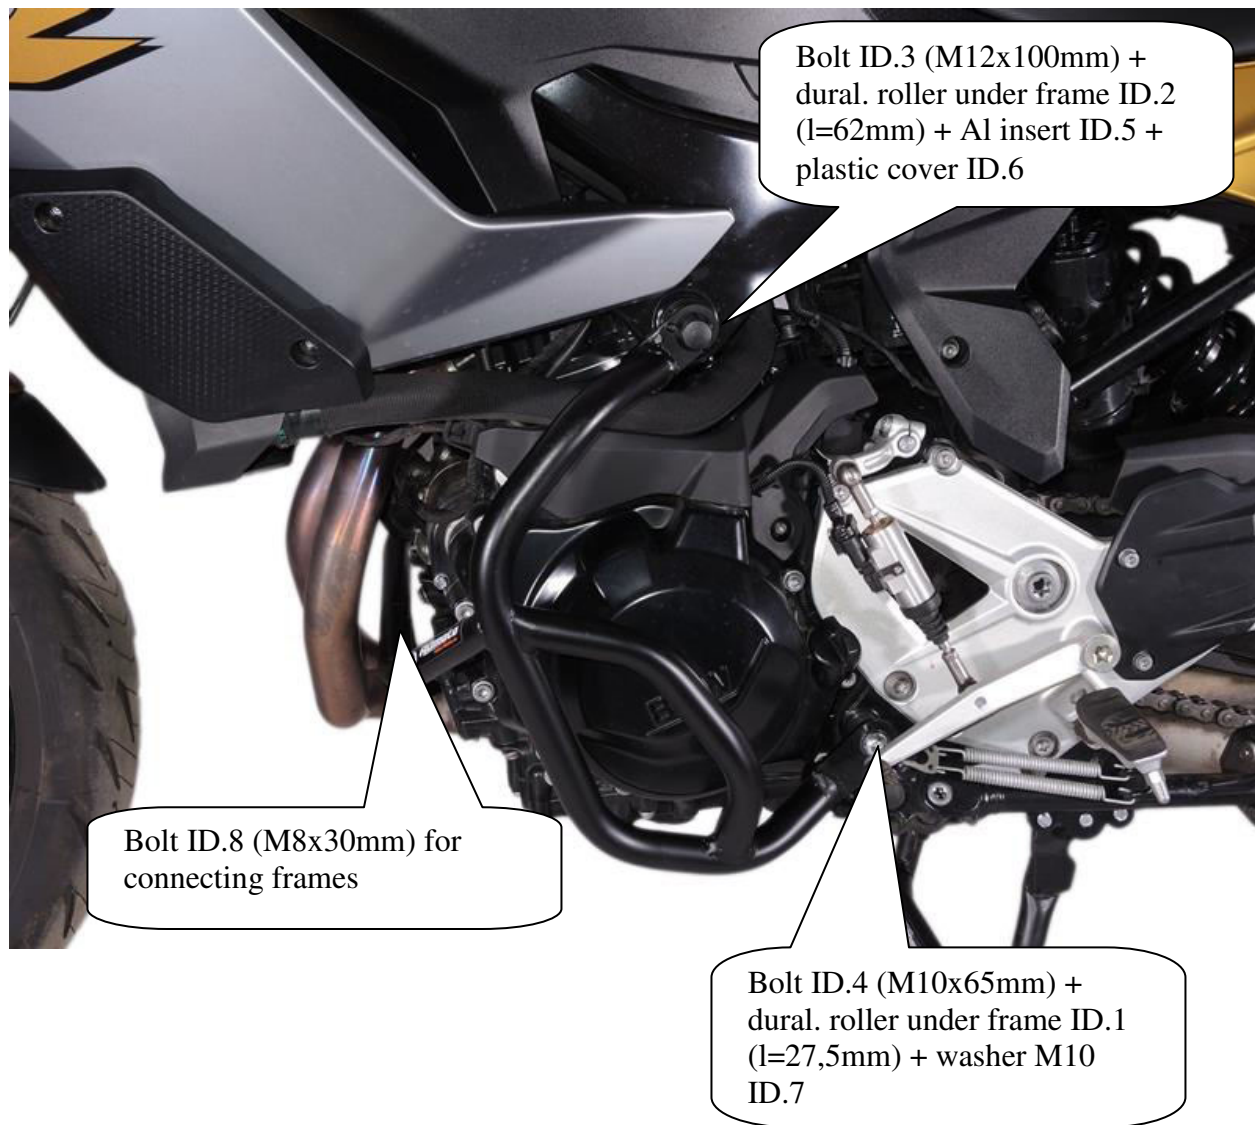

Right side :

Bolt ID.3 (M12x110mm) +
dural. roller under frame ID.2
(l=11mm) + Al insert ID.5 +
plastic cover ID.6

Original bolt

Steel adapter ID.8

Bolt ID.4 (M10x65mm) +
dural. roller under frame ID.1
(l=23mm) + washer M10 ID.7

