

CF169

Aprilia Tuareg 660

Kit for left side			
ID	Description	Cat.No.	Pc
1	Crash frame – upper	CF168-L	1
2	Crash frame – lower	CF167-L	1
3	Protector	PVPKN-0/16	1
4	Al insert to the protector	X131	1
5	Dural.roller l=38,5mm	1402	1
6	Bolt M10x160mm	979	1
7	Bolt M10x50mm	849	1
8	Al insert under bolt	X115	1
9	Plastic cover for bolt	X4	1
10	Dural.roller l=20mm	1404	1
11	Dural.roller l=18,5mm	1403	1

Kit for right side			
ID	Description	Cat.No.	Pc
1	Crash frame – upper	CF168-P	1
2	Crash frame – lower	CF167-P	1
3	Protector	PVPKN-0/16	1
4	Al insert to the protector	X131	1
5	Dural.roller l=38,5mm	1402	1
6	Bolt M10x160mm	979	1
7	Bolt M10x50mm	849	1
8	Al insert under bolt	X115	1
9	Plastic cover for bolt	X4	1
10	Dural.roller l=20mm	1404	1
11	Dural.roller l=20mm	1292	1
12	Bolt M10x60mm	850	1
13	Washer M10	804	1


We recommend using medium strength thread glue during assembly.

Right side :

Bolt M10x50mm
ID.7 + dural.under frame l=20
ID.10 + Al insert under bolt
ID.8 + plastic cover for bolt
ID.9

Bolt M10x160mm
ID.6 + dural.roller under frame
l=38,5mm ID.5 + Al insert to
the protector ID.4 + protector
ID.3

Bolt M10x60 ID.12 + washer
M10 ID.13 + dural. roller under
frame l=20mm ID.11

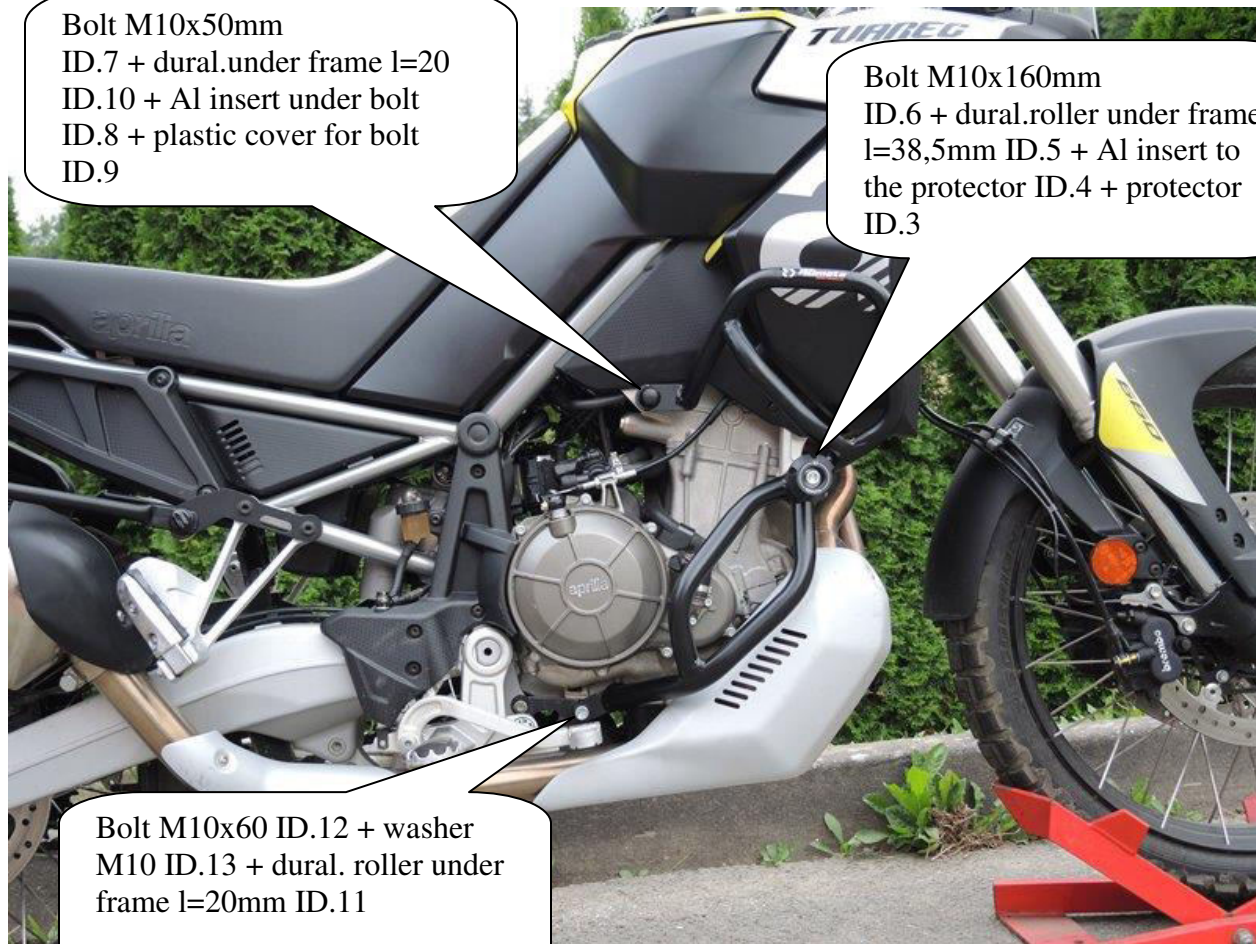

Left side :

