

CF191

Benelli TRK702

Kit for left side:

ID.	Description	Cat.No.	Pcs.
1	Crash protector	N111	1
2	Dural.roller l=50mm	1219	1
3	Bolt M10x160x1,25mm	929	1
4	3M tape		2
5	Bolt M8x16mm	829	1
6	Dural.adapter	680	1
7	Dural.adapter with threads	682	1
8	Bolt M6x35mm	989	2
9	Washer M6	947	2
10	Washer M10	804	1
11	Washer M8	802	3
12	Bolt M8x30mm	834	1
13	Dural.roller l=16,5mm	106	1
14	Bolt M8x40mm	828	1
15	Sticker RDmoto		2


Kit for right side:

ID.	Description	Cat.No.	Pcs.
1	Crash protector	N111	1
2	Dural.roller l=50mm	1219	1
3	Bolt M10x180x1,25mm	969	1
4	3M tape		2
5	Bolt M8x16mm	829	1
6	Dural.adapter	680	1
7	Dural.adapter with threads	682	1
8	Bolt M6x35mm	989	2
9	Washer M6	947	2
10	Washer M10	804	1
11	3M tape		2

The assembly process:

During assembly, we recommend using thread glue - medium strength (blue).


Mounting under light :

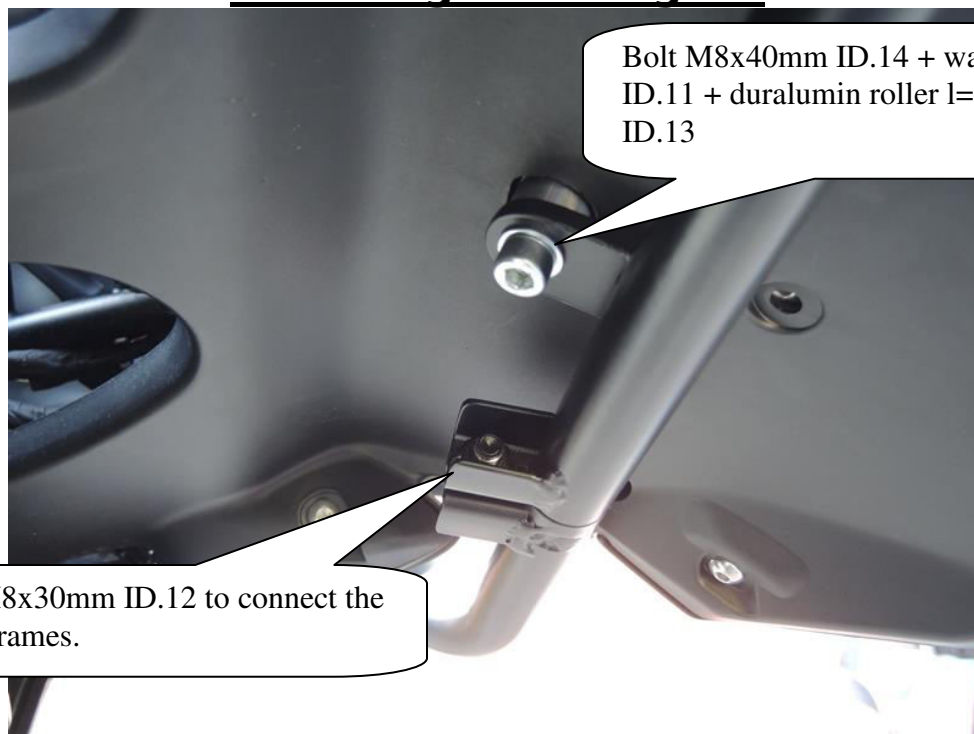

Bolt M8x40mm ID.14 + washer M8 ID.11 + duralumin roller l=16.5mm ID.13

Bolt M8x30mm ID.12 to connect the crash frames.

Side attachment :

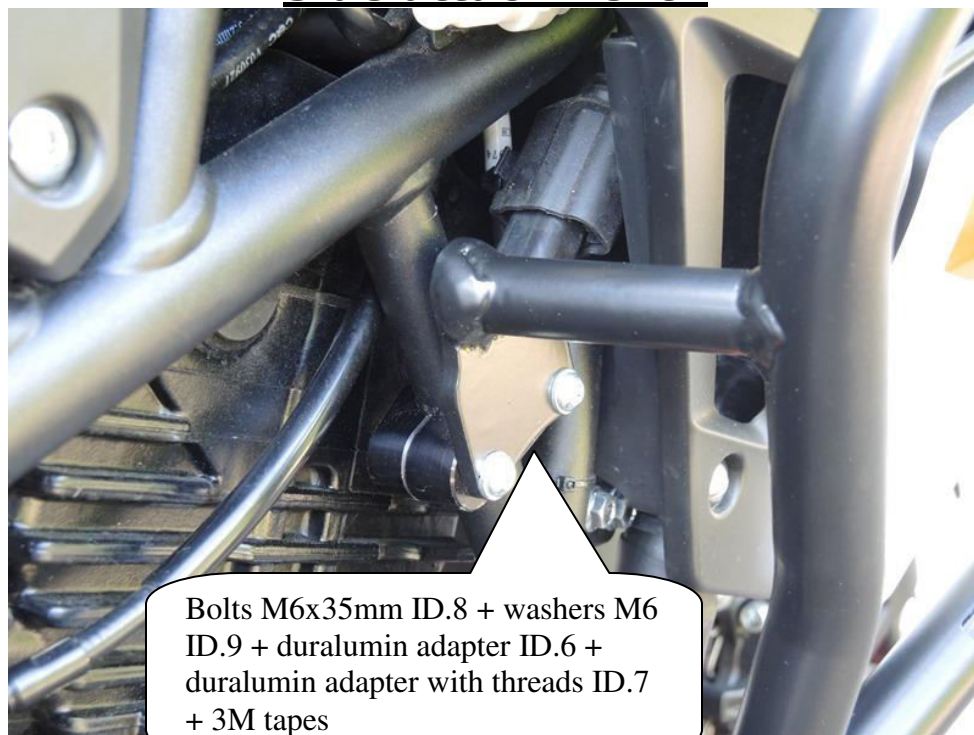

Bolts M6x35mm ID.8 + washers M6 ID.9 + duralumin adapter ID.6 + duralumin adapter with threads ID.7 + 3M tapes

Main attachment (L+R side) :



Dural. roller l=50mm ID.2

Bolt M10x160x1,25mm ID.3 (for left attachment) or bolt M10x180x1,25mm ID.3 (for right attachment) + washer M10 ID.10 + original nut M10 + protector ID.1 + bolt M8x16mm ID.5 + washer M8 ID.11