



CF39

BMW R1200GS / Adventure 2004-2007


Mounting kits

No.	Description	Cat.No.	Pcs
1	crash frames	CF	-
2	steel stirrup M6	X52	2
3	washer M6 flat	947	8
4	nut M6 insurance	948	5
7	screw M6x30mm	863	1
9	screw M8x25mm round head	831	8
11	washer M8 flat	802	12
12	nut M8 safety	809	6
16	3M tape	-	4
17	stirrup on the pipe diameter 25mm	X20	2
24	advertising sticker RDmoto	-	1


Installation :

Installation of the crash frames mount according to the instructions on the attached photos below.
Upper frames not possible to assembly without lower frames.

Warning – we recommend to use safety glue on threads of all bolts (moderate strong – blue colour).

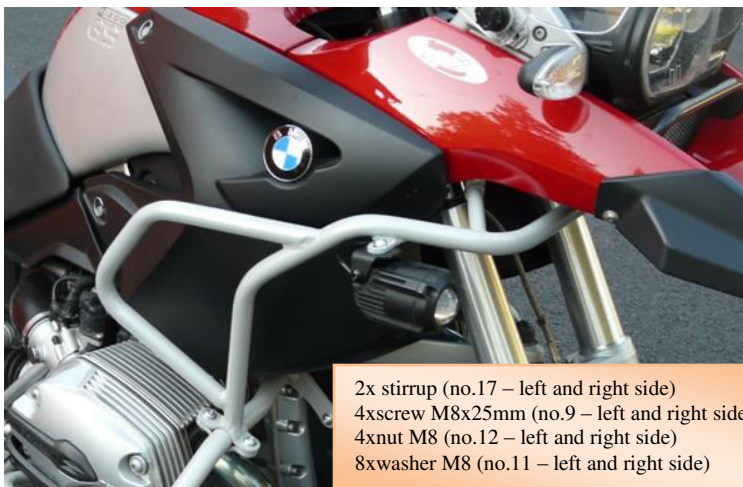

2x stirrup (no.17 – left and right side)
4xscrew M8x25mm (no.9 – left and right side)
4xnut M8 (no.12 – left and right side)
8xwasher M8 (no.11 – left and right side)

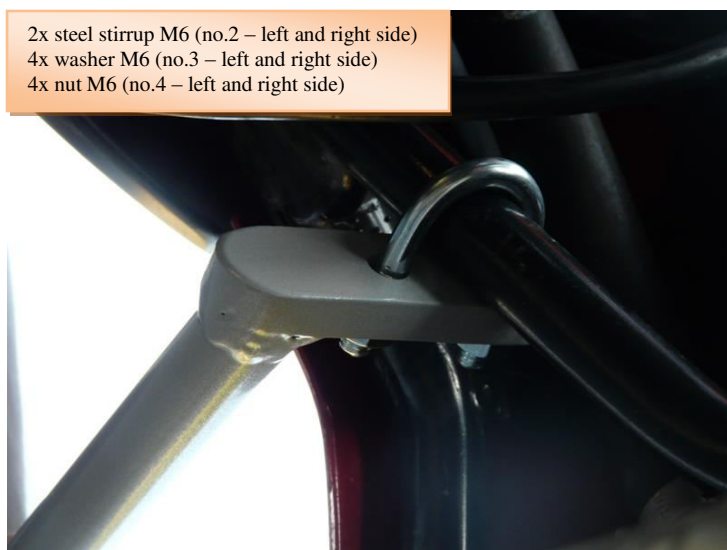

2x steel stirrup M6 (no.2 – left and right side)
4x washer M6 (no.3 – left and right side)
4x nut M6 (no.4 – left and right side)



1x screw M6x30mm (no.7)
2x washer M6 (no.3)
1x nut M6 (no.4)