

CF40

BMW R1200GS / Adventure 2004-2007

Mounting kits

No.	Description	Cat.No.	Pcs
1	crash frames	CF	-
2	steel stirrup M6	X52	2
3	washer M6 flat	947	8
4	nut M6 insurance	948	5
5	screw M6x25mm	874	1
6	screw M6x20mm	875	1
7	screw M6x30mm	863	1
8	screw M6x30mm round head	864	1
9	screw M8x25mm round head	831	8
10	screw M8x40mm cone head	835	1
11	washer M8 flat	802	12
12	nut M8 insurance	809	6
13	washer M8 spring	800	2
14	screw M12x80mm	956	2
15	washer M12 flat	803	2
16	3M tape	-	4
17	stirrup on the pipe diameter 25mm	X20	2
18	duralumin cylinder-diameter 20mm, length 19mm	477	1
19	duralumin cylinder-diameter 16mm, length 5mm	478	1
20	duralumin cylinder-diameter 20mm, length 13mm	479	1
21	duralumin cylinder-diameter 25mm, length 28mm	480	2
22	bar – strut between bars	X61	1
23	steel adapter	X68	1
24	advertising sticker RDmoto	-	1

Installation :


Installation of the crash frames mount according to the instructions on the attached photos below.

Warning – we recommend to use safety glue on threads of all bolts (moderate strong – blue colour).




2x stirrup (no.17 – left and right side)
4xscrew M8x25mm (no.9 – left and right side)
4xnut M8 (no.12 – left and right side)
8xwasher M8 (no.11 – left and right side)

1x screw M6x20mm (no.6)
1x screw M6x25mm (no.5)
2x washer M6 (no.3)
1x duralumin cylinder (no.19)

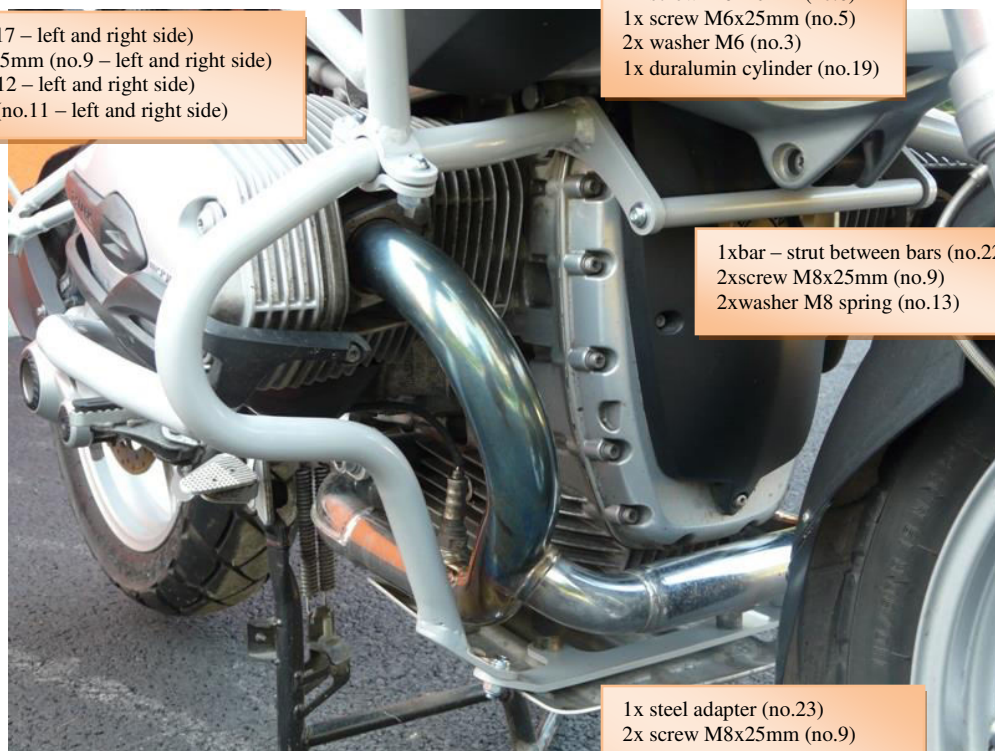

1xbar – strut between bars (no.22)
2xscrew M8x25mm (no.9)
2xwasher M8 spring (no.13)

1x steel adapter (no.23)
2x screw M8x25mm (no.9)
4x washer M8 (no.11)
2x nut M8 (no.12)
1x duralumin cylinder (no.18)
1x screw M8x40mm (no.10)
1x screw M6x30mm (no.8)
1x duralumin cylinder (no.20)

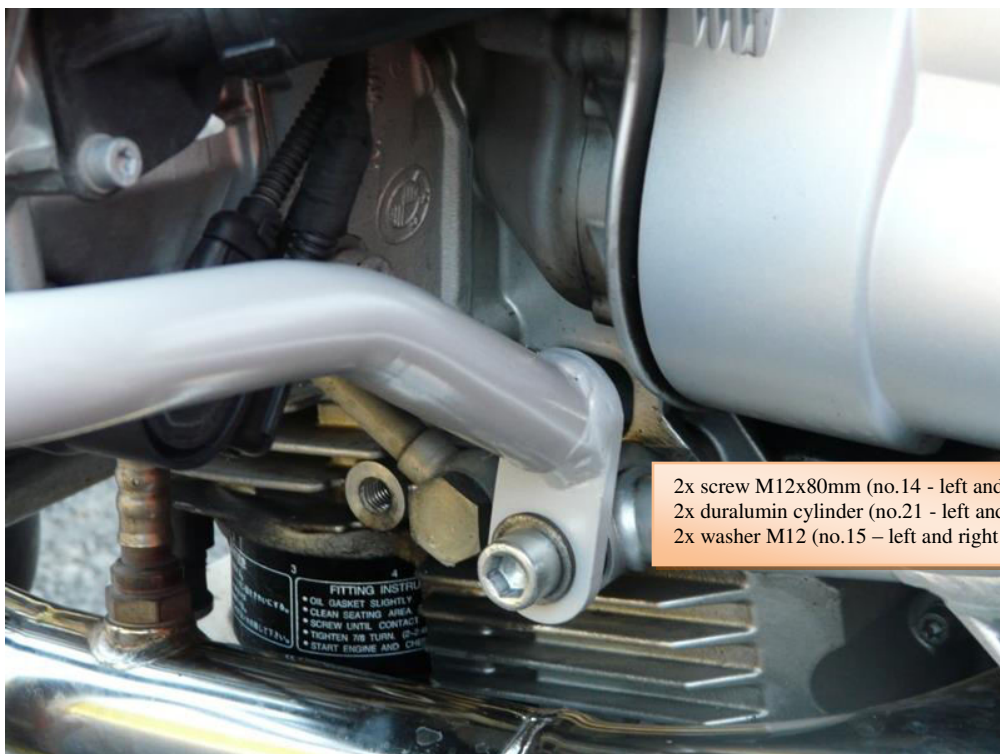

2x screw M12x80mm (no.14 - left and right side)
2x duralumin cylinder (no.21 - left and right side)
2x washer M12 (no.15 - left and right side)



