

CF47

BMW R 1200GS Adventure 2014-


Mounting kit for the left side:

ID	Description	Cat.no	Pcs
1	Bolt M8x35	861	1
2	Dural.cylinder - 15mm	465	1
3	Bolt M10x45	848	1
4	Washer M10	804	1
5	Washer M8	802	1
6	Bolt M8x25	833	1
7	Nut M8	812	1

Mounting kit for the right side:

ID	Description	Cat.no	Pcs
1	Bolt M8x35	861	1
2	Dural.cylinder - 15mm	465	1
3	Bolt M10x45	848	1
4	Washer M10	804	1
5	Bolt M8x30	834	1
6	Dural.cylinder d=8mm	1105	1
7	Nut M8	812	1
8	Washer M8	802	1

Install crash bars according to the pictures below.

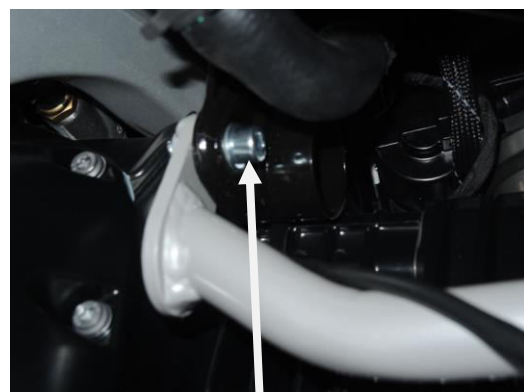

Bolt M8x25 ID6 + washer ID5.

For tightening lower crash frame use bolt ID3 and washer ID4.

For tightening upper crash frame use bolt ID1 and dural. Cylinder ID2.



Bolt ID.3 and washer ID.4.

Dural cylinder ID.2.

Bolt ID.1+ washer ID.8



Dural cylinder ID.6.

Nut ID.7 and bolt M8x30 ID.5.

We recommend to use the glue on all threads (blue colour – medium strong).